











Event	Sounds	LED indicator (Reagle-Button)	Note
	"B-" : short beep sound "B----" : long beep sound		
Power On	WELCOME beeps (Do Re Mi)	WHITE backlight on the keypad	
Factory Default State	None	 Blinks RED	Reagle-button blinks RED every 3 seconds.
Ready for Pairing	None		When the lock is in the factory default state, you can set the lock into Pairing Mode by pressing the Reagle-button. The Reagle-button will stay RED to indicate that it's ready for pairing.
Unlocking	B-B-		
Locking	B-		
Access denied	B-B-B-		Invalid users/ Code/ ReagleCode
Latch jamed	B-B-B-		It happens when the deadbolt latch fails to get the correct position. Please check if the deadbolt latch and the strike plate are mis-aligned.
Low Battery	B-B-B-B-B-		Low battery warning. It's recommended to replace the batteries.
Extremely Low Battery	B-B-B-B-B-B-B-B-B-		Sytem will not drive the latch for locking and unlocking. Please replace the batteries.
Resetting	B-B-		Press "R" button for 5 seconds untill 2 beeps are heard and Reagle LED becomes yellow. Release the "R" button. Wait another 10 seconds untill the WELCOME beeps are heard. The factory reset is done.
Lock hardware communication error	B----B-B-B-		Check the cable connection between external and internal part of the lock.